 


HOW TO USE:


1. CONNECT THE DB9 CONNECTOR TO PC SERIAL PORT.
2. CONNECT THE 4-PIN CONNECTOR TO YOUR LOGIC CIRCUIT ACCORDING TO PIN ARRANGEMENT.
3. ENSURE +VCC (3 - 5V) IS PROVIDED. IT WOULD NOT WORK WITHOUT POWER SUPPLY.

4 PIN CONNECTOR



CONNECT TO 3 - 5V
LOGIC CIRCUIT

DB-9 FEMALE
CONNECTOR

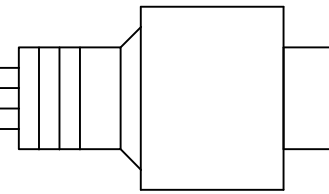

CONNECT TO PC